


OPTIONAL REAR MOUNTED FUEL PUMP MODULE WIRE DIAGRAM

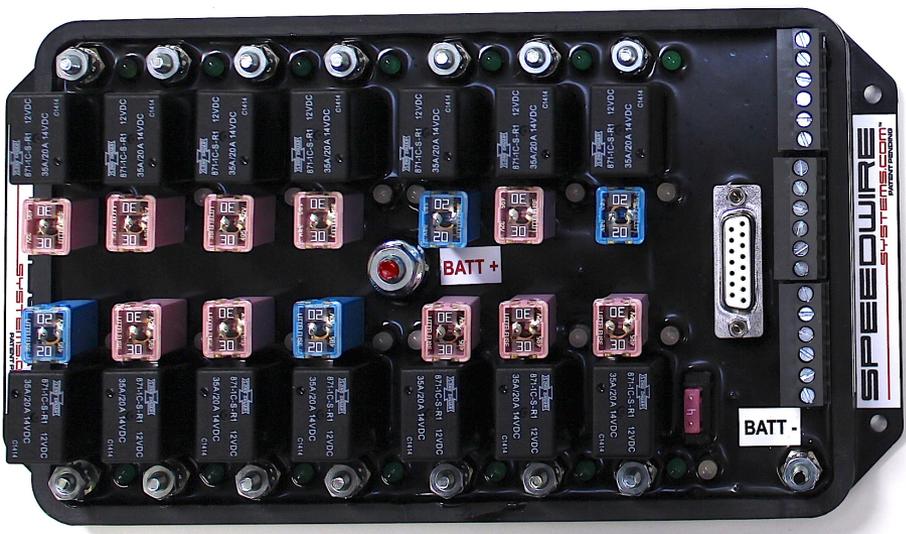

Rear mounted fuel pump module can be triggered by any relay controller by providing a positive signal to the (pos input) post to trigger the relay of the auxiliary module. This drawing is just an example of a particular relay output, the red wire going to the fuel pump module must wire to the “fuel pump” relay labeled on your specific relay controller

