


SPEEDWIRE SYSTEMS™

4 Stage Nitrous Controller with a clutch switch Individual setups may vary, use this illustration as a guide.

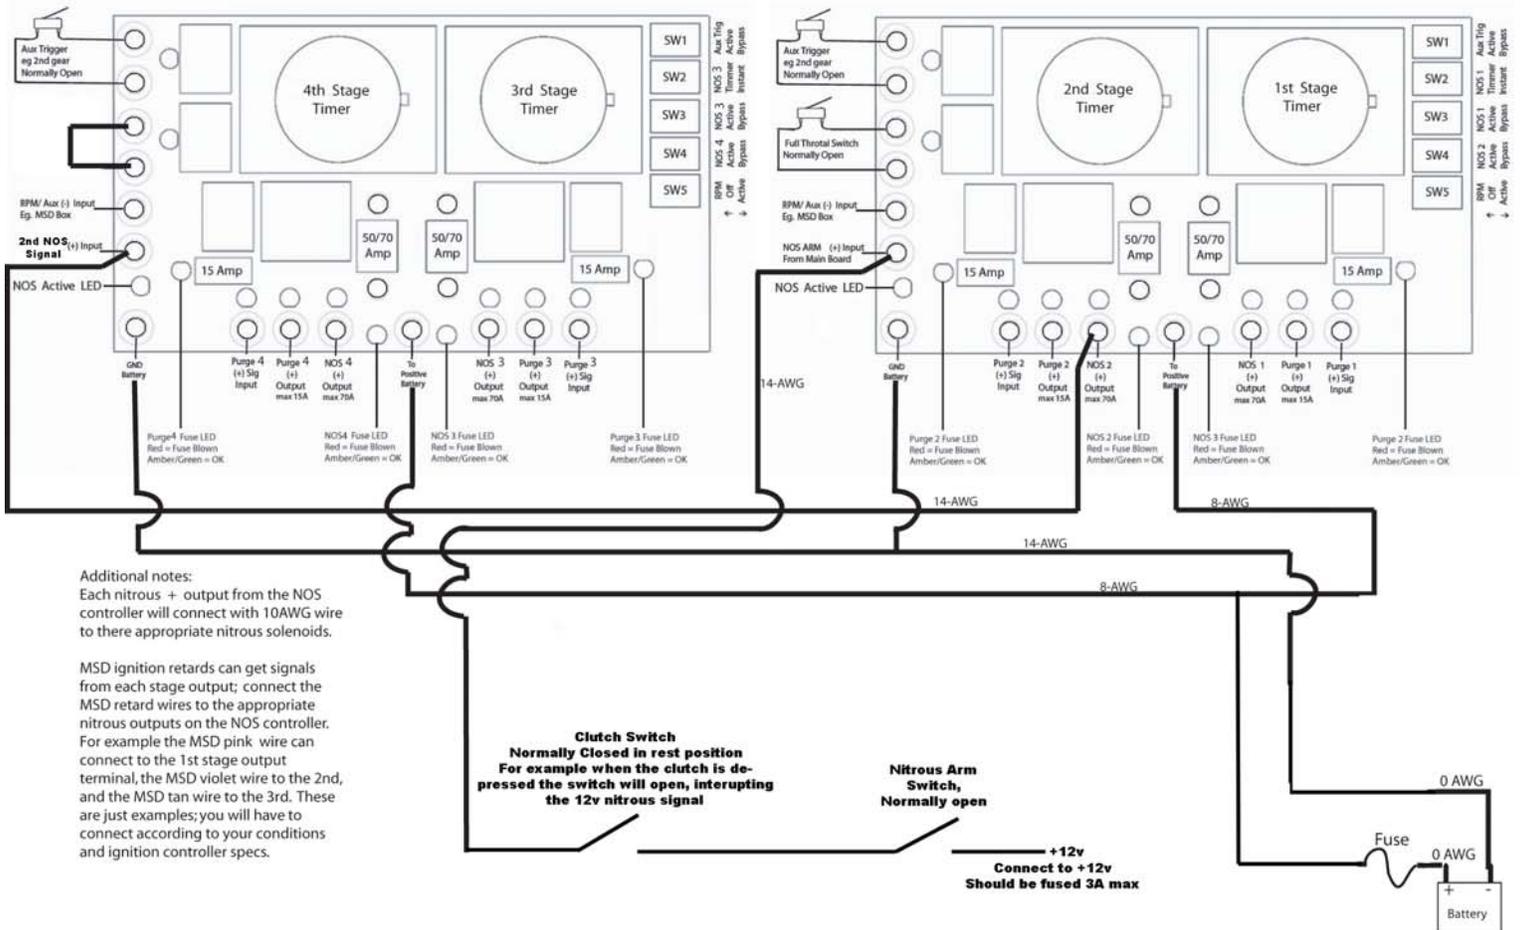

Note: All electrical connections must be correct ie. (+ to +) (- to -). Power or Battery connections CAN NOT be wired in reverse or crossed in any way. Warranty will be void if not installed correctly.

Note:
There must be an adequate safety fuse cutoff device directly after the battery between the battery bank and any other devices.

Use appropriate sized wire conductors, as per application.
See wire AWG size chart, consult the American Wire Gauge recommendations.