


Rear mounted fuel pump module can be triggered by any relay controller by providing a positive signal to the (pos input) post to trigger the relay of the auxiliary module



FUEL PUMP ACTIVATION WITH MAIN RELAY CONTROLLER (example) TO POSITIVE INPUT TO AUX MODULE

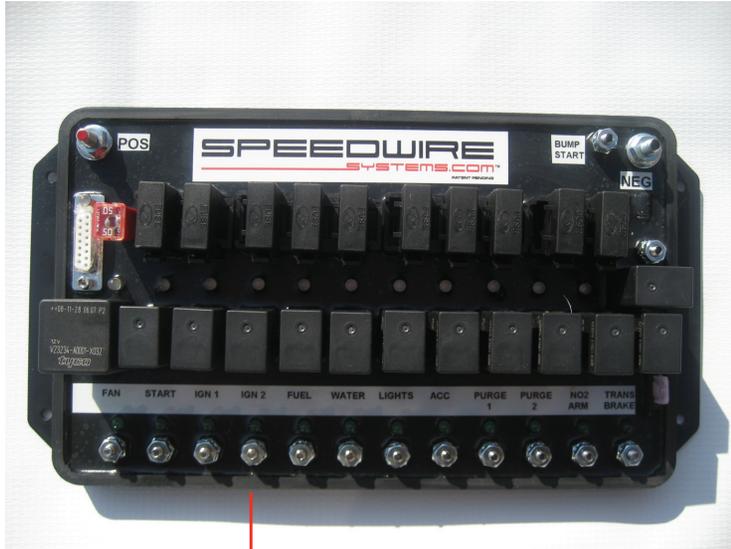