





PLEASE READ INSTRUCTIONS CAREFULLY CONNECTING POWER AND GROUND IN THE WRONG TERMINALS WILL CREATE A SHORT AND DAMAGE RELAY CONTROLLER VOIDING WARRANTY.

SINGLE RELAY V2 MODULE INSTRUCTIONS


Main functions

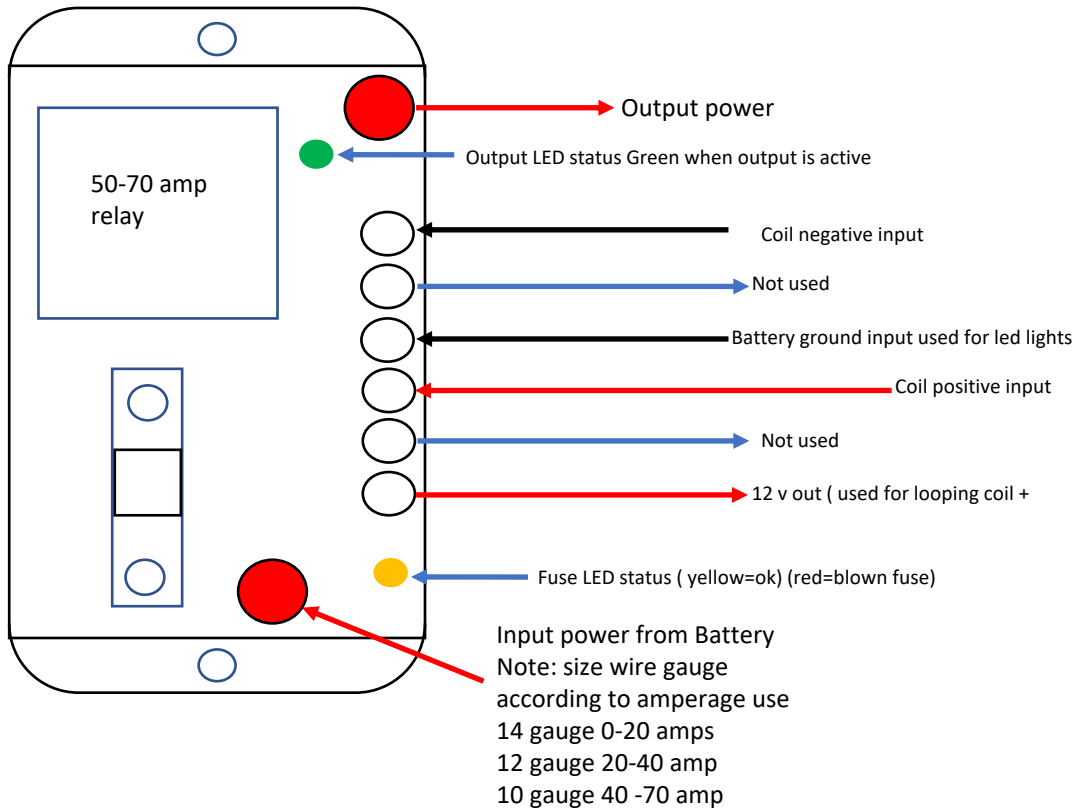


Negative trigger diagram

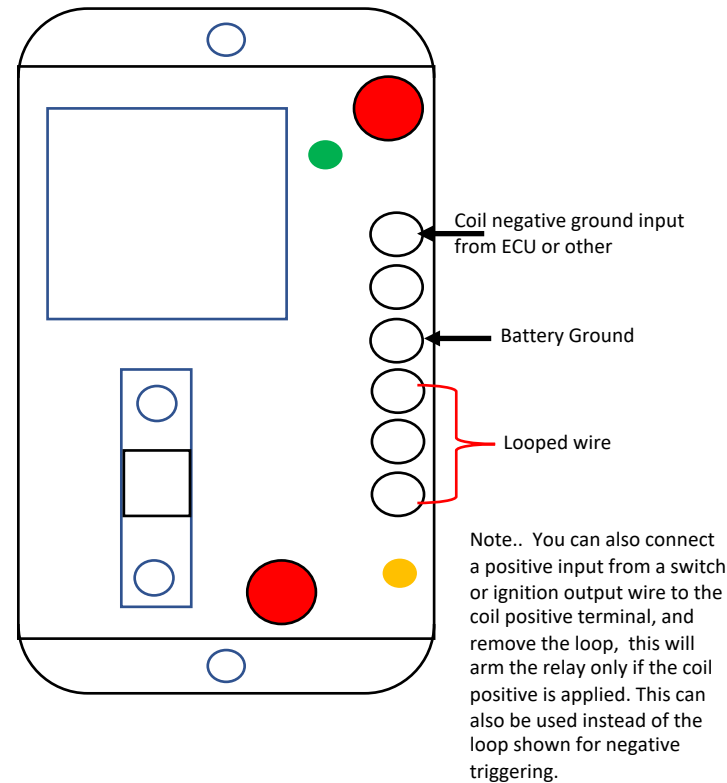

Positive trigger diagram

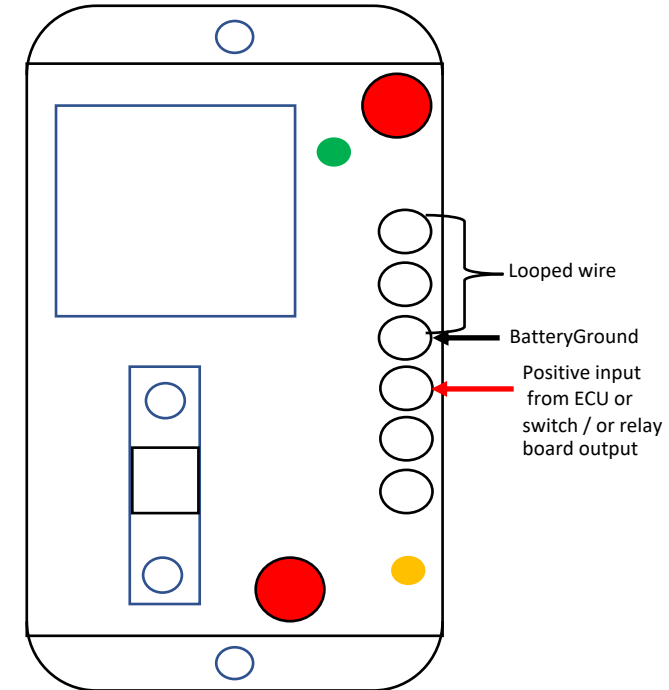

SINGLE RELAY MODULE FOR SINGLE STAGE NITROUS

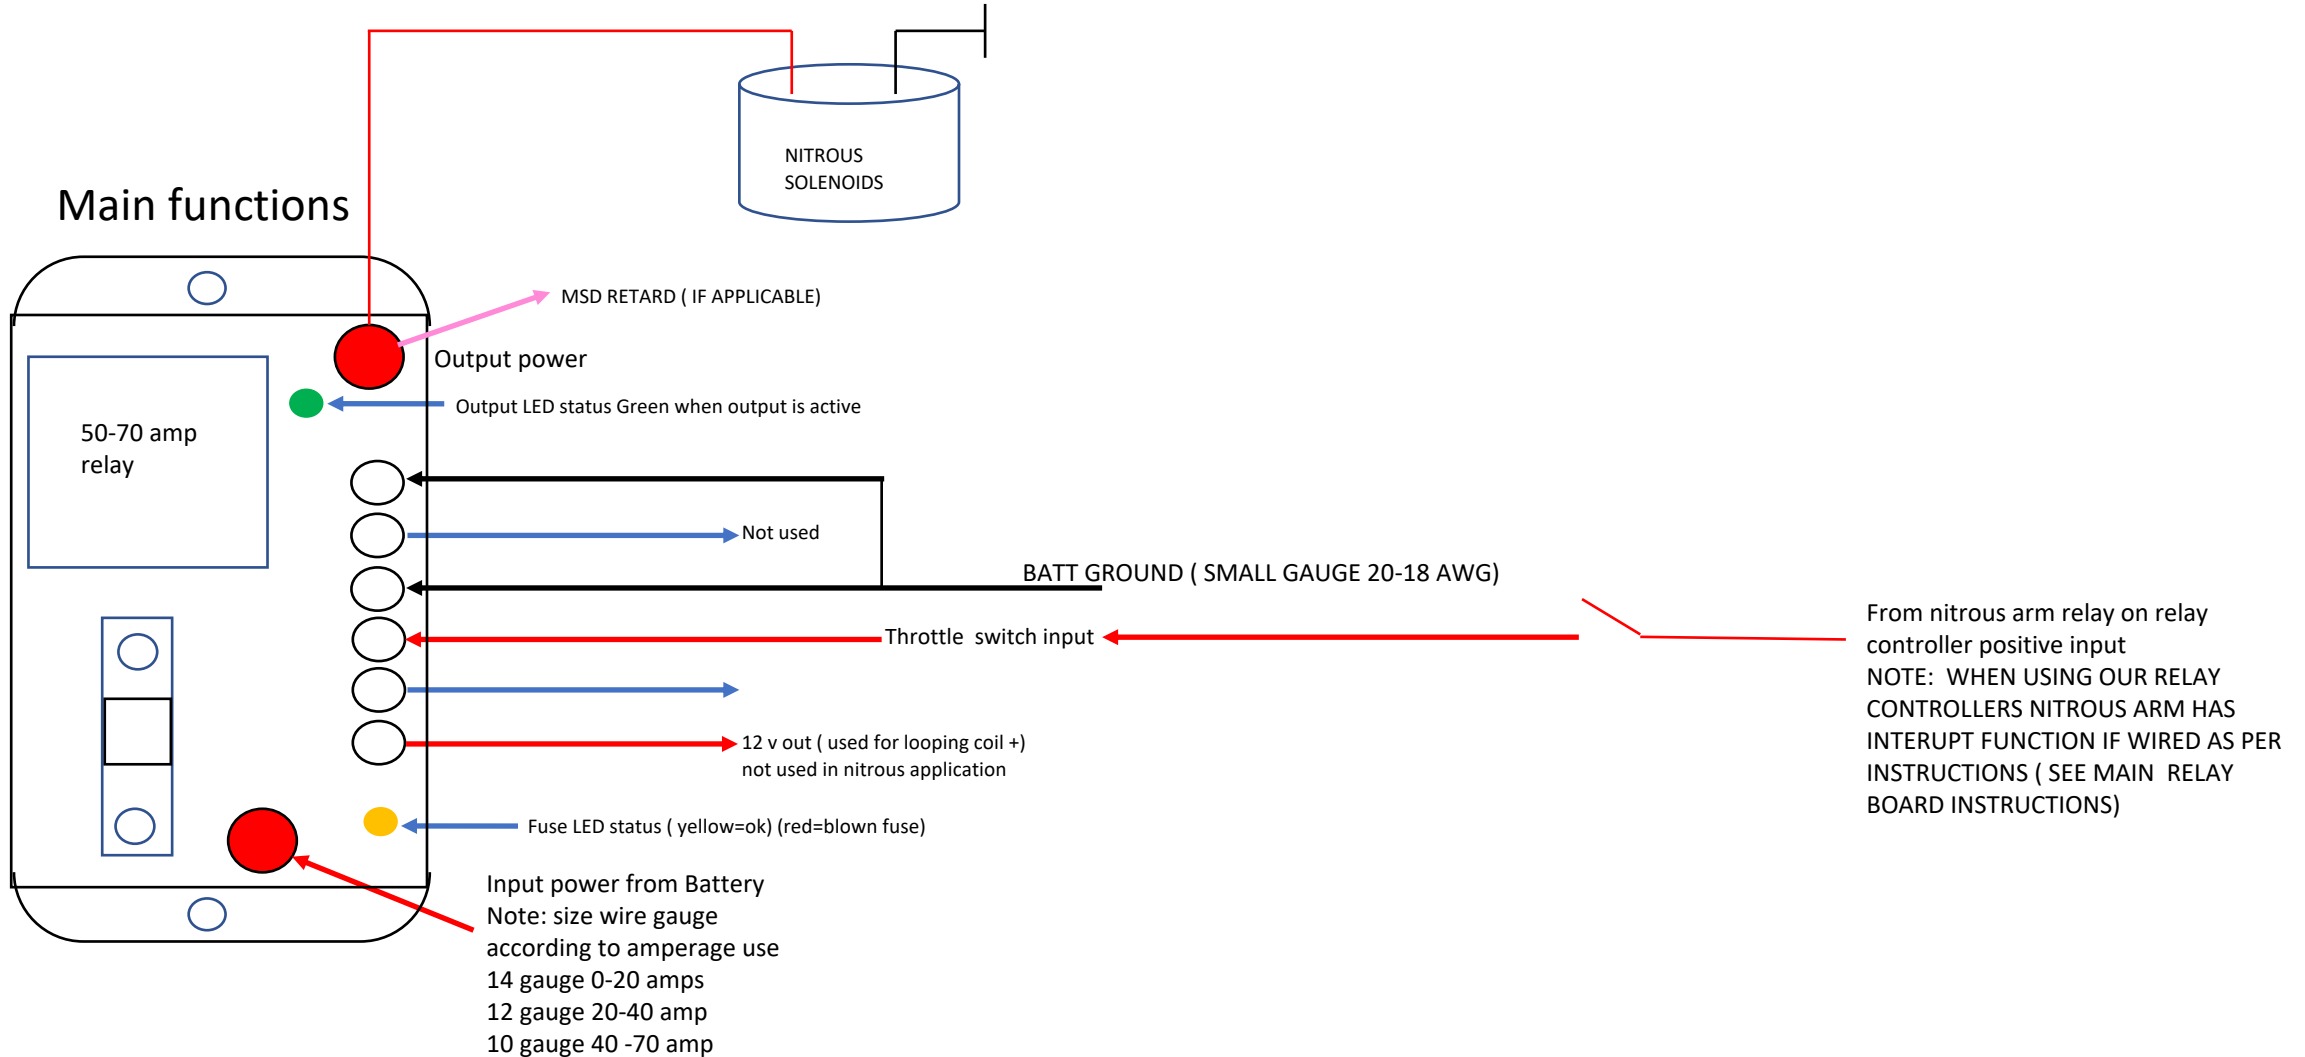

SINGLE RELAY MODULE FOR FUEL PUMP

