

SINGLE RELAY V2 MODULE INSTRUCTIONS

PLEASE READ INSTRUCTIONS CAREFULLY CONNECTING POWER AND GROUND IN THE WRONG TERMINALS WILL CREATE A SHORT AND DAMAGE RELAY CONTROLLER VOIDING WARRANTY.


Main functions

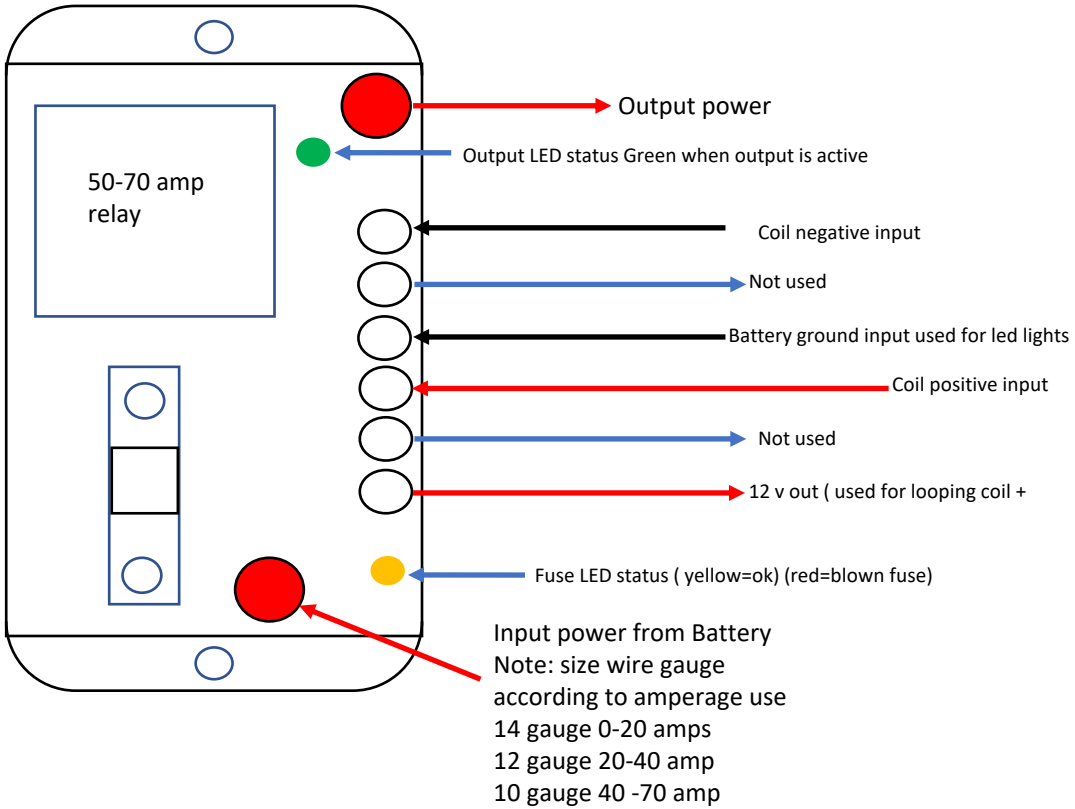


Negative trigger diagram

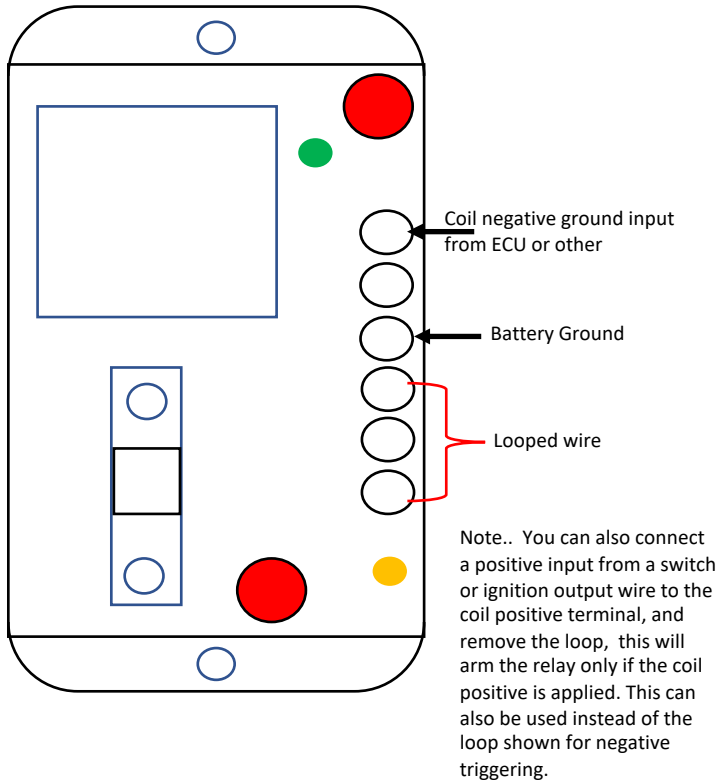


Positive trigger diagram

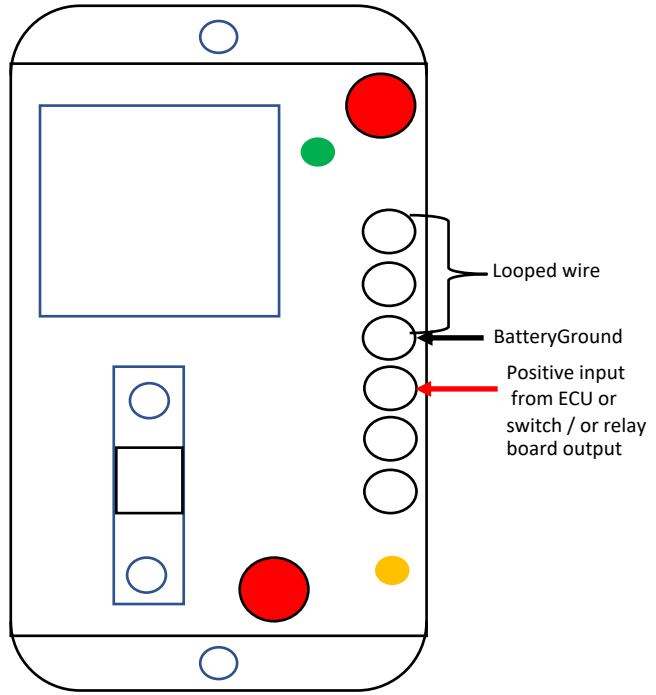

SINGLE RELAY MODULE FOR FUEL PUMP

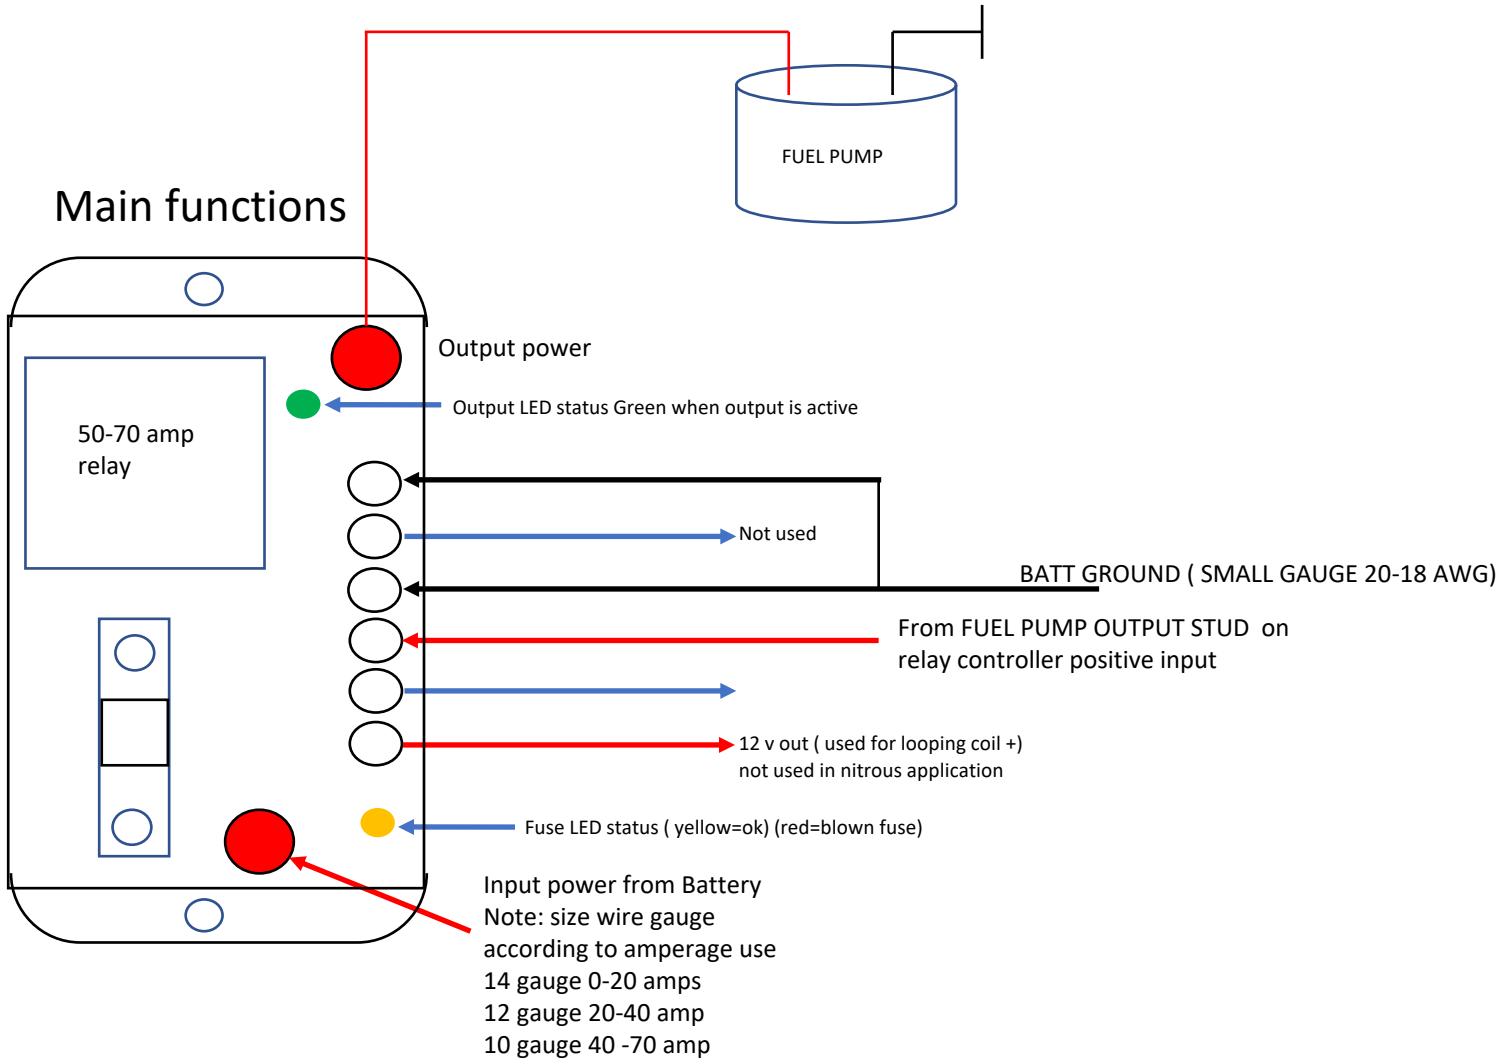

SINGLE RELAY MODULE FOR SINGLE STAGE NITROUS NEGATIVE GROUND INPUT PROGRESSIVE ACTIVATION WITH W.O.T

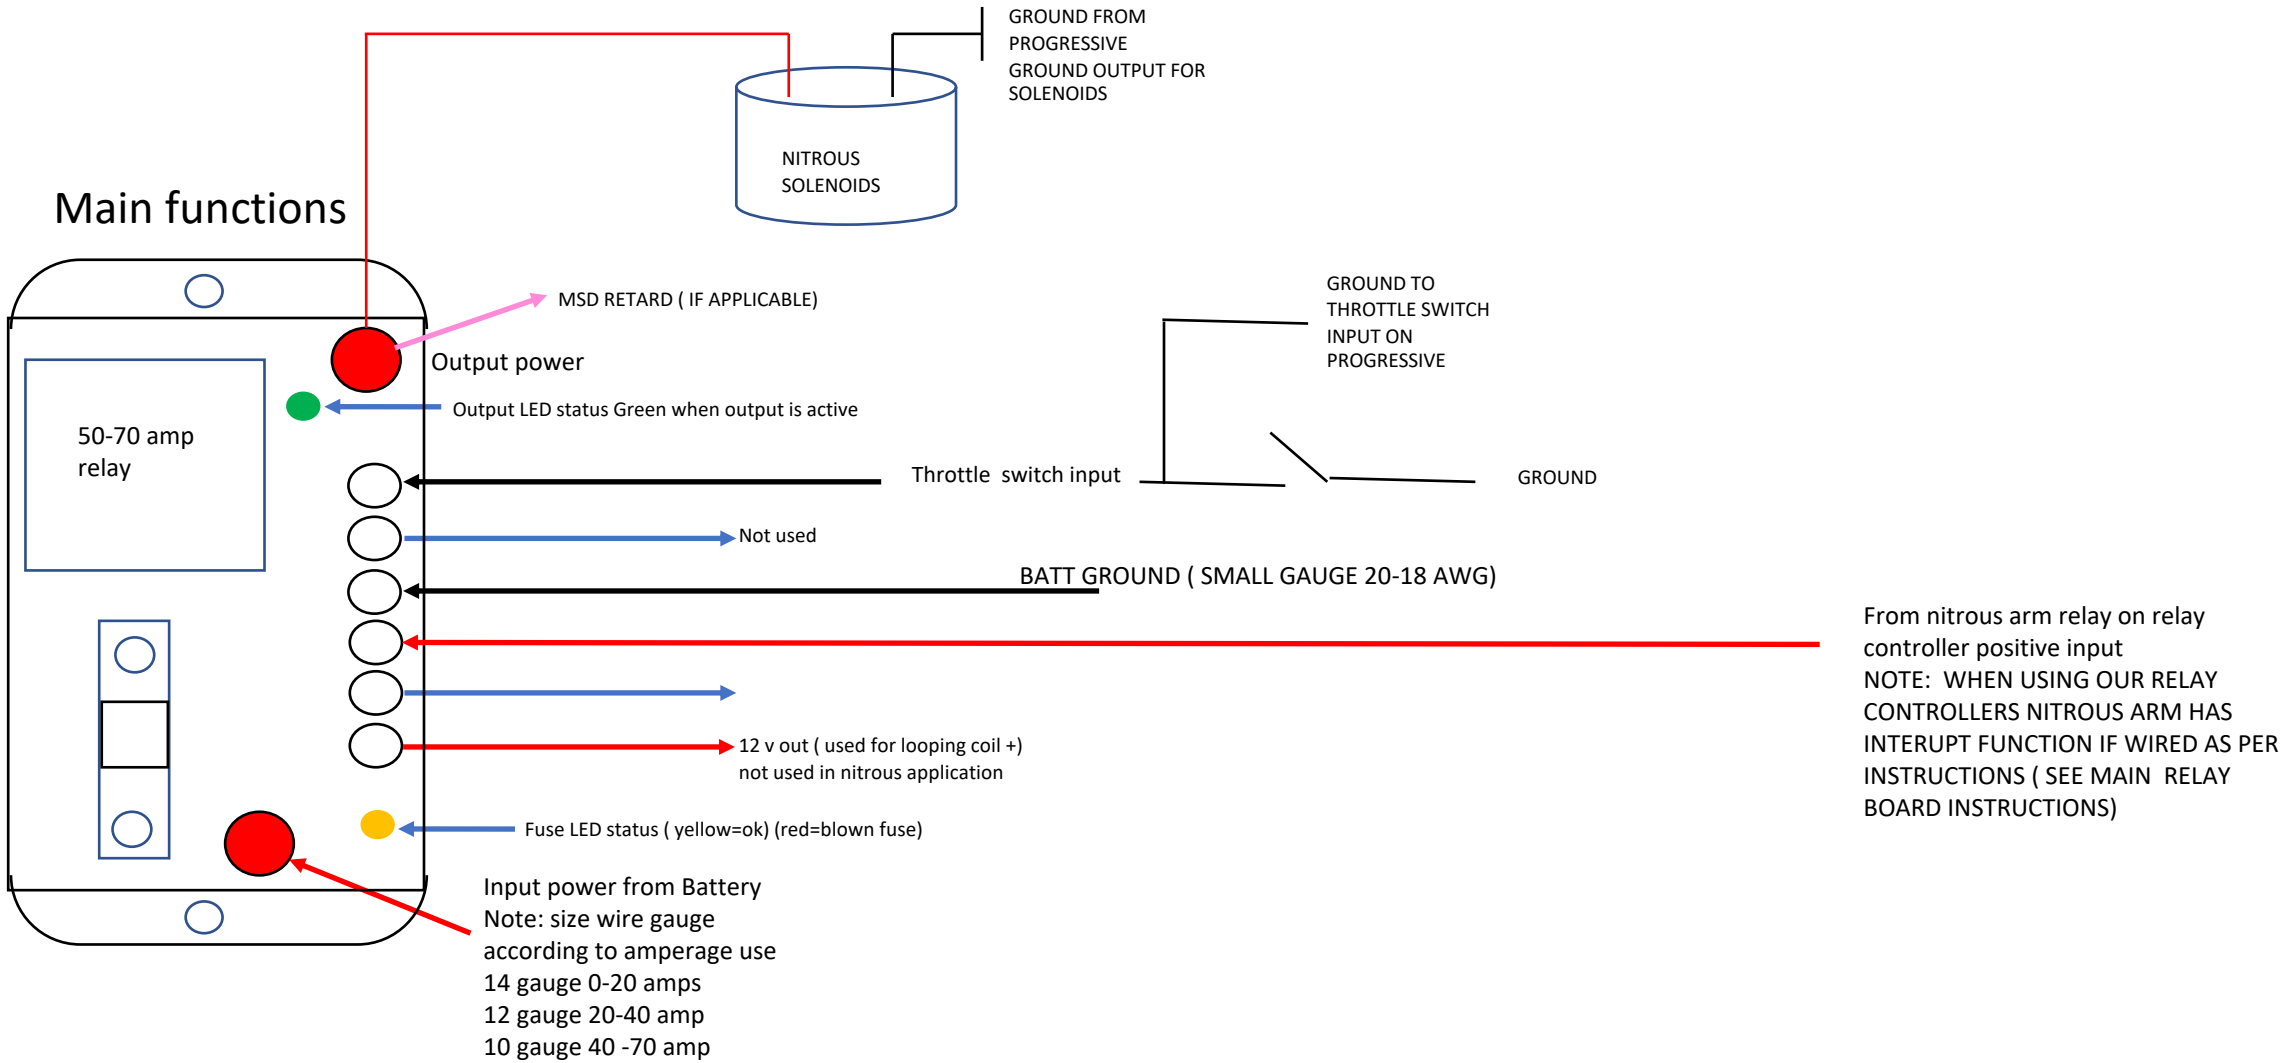

SINGLE RELAY MODULE FOR SINGLE STAGE NITROUS POSITIVE INPUT PROGRESSIVE ACTIVATION WITH W.O.T

